



RC-20 User Guide

(2018 Model)

Recording / Locking Instructions

1. To record a message of up to 20 seconds, turn the dial to “R” and hold down the center button. A red light will show on left side of unit indicating recording is in process.
2. Release the center button when your recording is complete.
3. To play your record, turn the dial to “P” and press the middle button to play your recording.
4. If you are happy with your recording, you can then lock the unit by holding down the middle button while the dial is in the “P” position for approximately 12 seconds.
5. When successfully locked, you will hear a single beep.
6. To unlock the unit, hold down the middle button while the dial is in the “P” position for approximately 12 seconds.
7. You will hear two beeps indicating the unit has now been unlocked.
8. To turn off your unit, set the dial to the “0” position. This will turn off the unit.

Battery Replacement

Replacing the battery in your RC-20 will not delete your recording and should be a simple and pain free experience. To do so you will be required to open the unit. Please note that Be My Bear cannot be held responsible for any damage that may be caused during this operation. To replace the batteries you will require 3 x LR44 batteries and 1 x fiat head screwdriver.

1. Place the recorder on a flat surface and turn the dial to read “P”.
2. Carefully remove the cover using the screwdriver.
3. Remove the old batteries and replace with new.
4. Replace the cover with the unit dial still in the “P” position.

